



NES Wireless Controller Specification

Product Features:

1. This controller is a wireless controller that is mainly used in conjunction with the NES console; the controller is also compatible with SNES / Wii platforms.
2. The design is simple, reasonable, generous and practical, suitable for different people
3. Using 2.4GHz RF technology, long distance control, low latency
4. Transmitter and receiver are automatically connected and have LED indication;
5. Provide 10 key function input keys; built-in 3.7V / 200mA lithium battery, can work continuously for 8 hours, equipped with 1.2m charging cable
6. Provides 1 TURBO button and 1 TURBO push-pull switch for more convenient and quick control in the game
7. Provide the function of returning to the homepage

Product parameters:

1. Color:

HS-NES208 (gray-black) HS-NES209 (black)

2. Controller parameters:

Controller size: 14.2*6.3*2.7CM

Controller weight: 136g

Material: ABS

Controller color: gray-black, black

Button silk printing: A, B, A + B, TROUB, SELECT, START, red color

3. Electrical parameters:

Operating Voltage:	DC 3.7 V
Operating current:	45mA
Built-in battery:	200 mAh

4. Packaging parameters:

Single unit packing weight: 248g

Color box size: 10.5*3*15.5CM

Packing quantity: set / box

Packing size:

Gross weight:

5. Information: Packaging documents (some specifications of this package are wrong, please refer to the instruction manual and this specification), instruction manual



6. Operation guidelines:

NES / SNES / Wii connected to the console: Plug the receiver connector into the console. The indicator flashes and then press the controller START button for 3 seconds. The indicator will flash at this time. Complete the connection and you are ready to use.

Controller on / off: long press START for 3 seconds to turn on, long press SELECT for 3 seconds to turn off;

There is no operation of the controller in the online state, and the controller will automatically shut down after 5 minutes;

Automatically shuts down after 30 seconds when not online.

Back to homepage function: Press SELECT + START at the same time to return to the homepage

TURBO function: When the TURBO switch is pushed to the A position, pressing the TURBO key will cause the A key to burst, and when the switch is pushed to the B position, pressing the TURBO key will cause the B key to burst.

B + A key function: Pressing B + A key means that B key and A key function simultaneously.

HOME function: After entering the game, press SELECT + START at the same time to return to the home page (only for NES and SNES consoles)

Charging: The controller light will flash slowly when charging in the online state, and the controller light will always be on when fully charged.

The controller light will flash slowly during charging when not connected, and the controller light will go out when fully charged

Reset key: If the controller is abnormal, press the reset key to reset



宏声实业(深圳)有限公司
HonSon Group Electronic Co.,LTD

NES Wireless Controller

HS-NES208
&HS-NES209

Page3of 3

Product Image:

